 


**Sensor Configuration Manual** When the Veko Advanced DALI Encelium sensor is plugged into the light line and connected to power and fully programmed in a Osram Light Management System it will fully function and perform as a motion detection sensor. All Veko sensors have a standard configuration. Some of the features are manual adjustable with a remote control (TR67). These functions are described in the manual below. The rest of the functions can only be altered in the software of the installed Osram LMS (provided and programmed by Veko Lightsystems International).

# Manual Advanced DALI Encelium Sensor

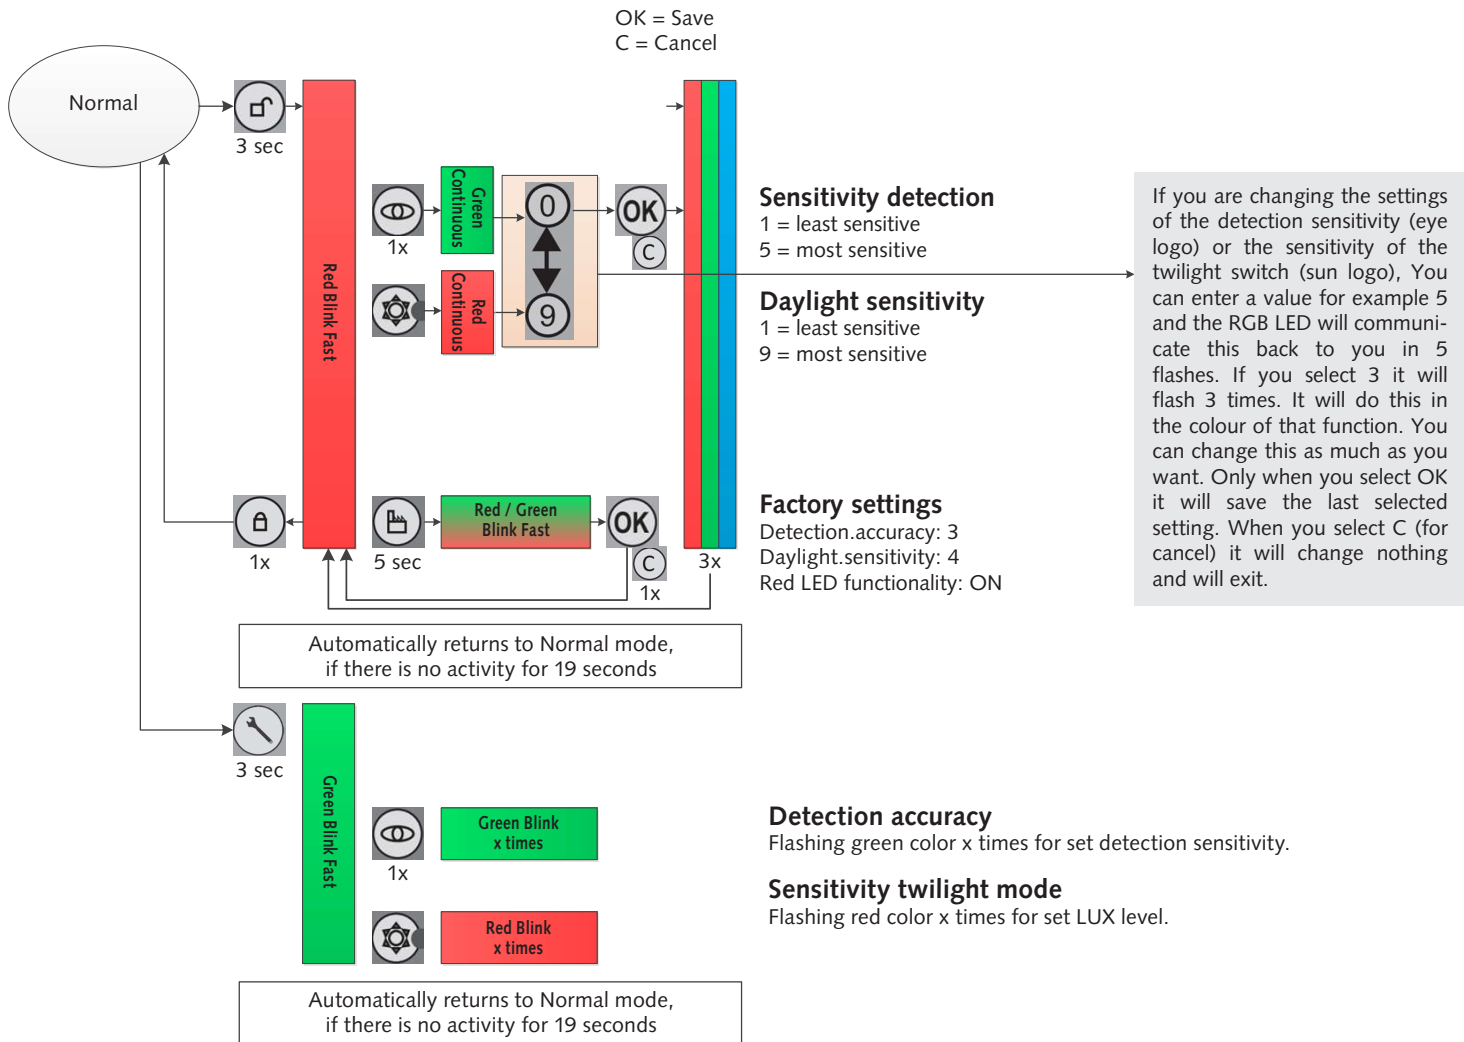

If you are changing the settings of the detection sensitivity (eye logo) or the sensitivity of the twilight switch (sun logo), You can enter a value for example 5 and the RGB LED will communicate this back to you in 5 flashes. If you select 3 it will flash 3 times. It will do this in the colour of that function. You can change this as much as you want. Only when you select OK it will save the last selected setting. When you select C (for cancel) it will change nothing and will exit.



Product code:  
TR-67