



PNR-05500 INSTALLATION INSTRUCTIONS

 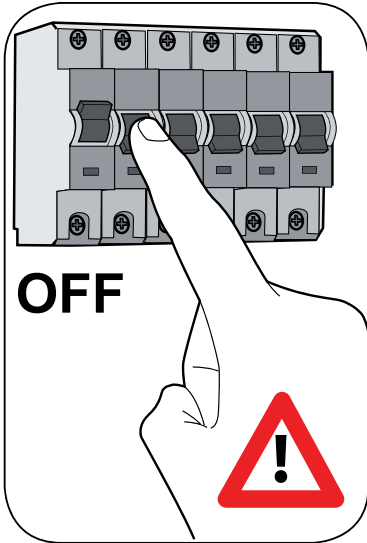


- Note:**
1. Disconnect the mains before installation.
 2. When adjusting the length of the light lines between the walls an expansion coefficient of 24×10^{-6} (2.4 mm per 100 m per °C) should be taken into account.
 3. Perspiration from hands can leave marks on the aluminium profiles and mirrors, which can be difficult to remove. Take appropriate precautions: wear gloves.
 4. 7-pin electrical connectors are suitable for solid wiring with a connection diameter of 1.5 – 2.5 mm².


Installation instructions Veko Light line PNR-05500

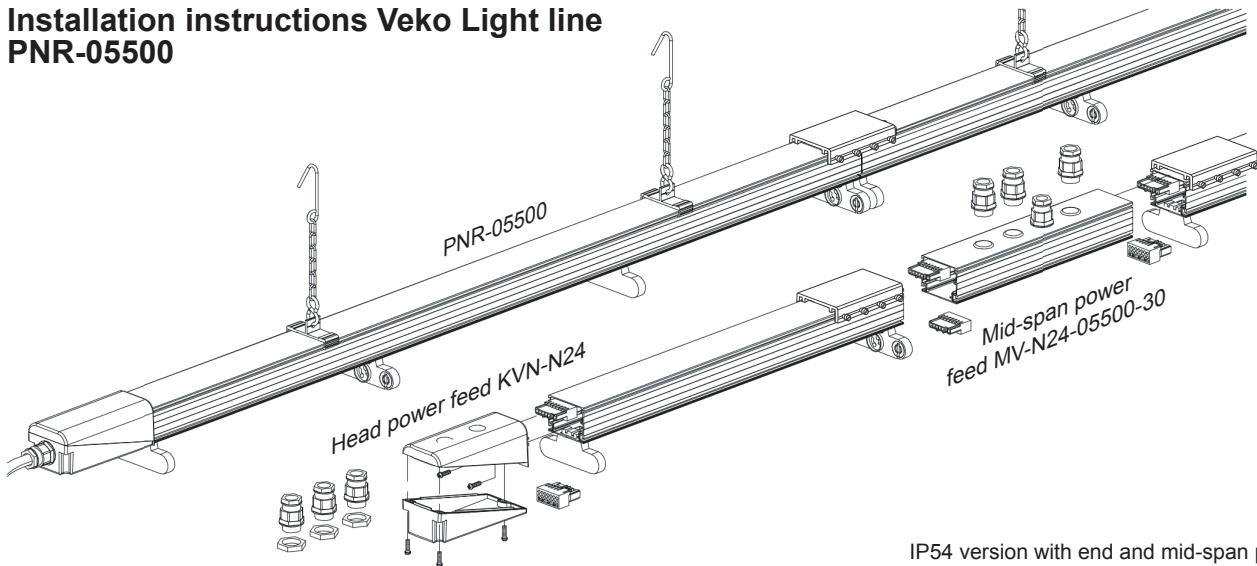

IP54 version with end and mid-span power feed KVN-N24 and MV-54-05500-30 respectively.



 Light line must hang straight and in line



Mirrors or reflectors by 2 suspension points or, **at full capacity, by 3 suspension points**


With protective basket or grid always by 3 suspension points.

PNR-05500 INSTALLATION INSTRUCTIONS




Electrical and mechanical connections


① Hang the light lines at the same height

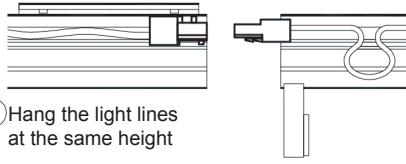


Click

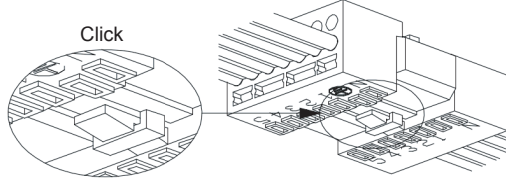


④ Place the profile over the connector

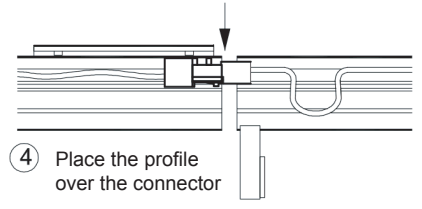



② Position the connector with the spiral behind the top of the profile

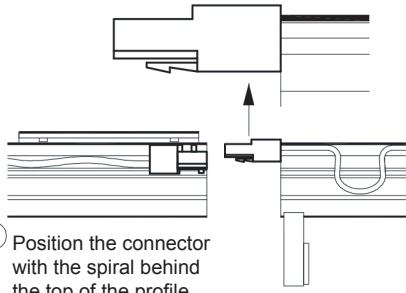


③ Connect the connectors to each other

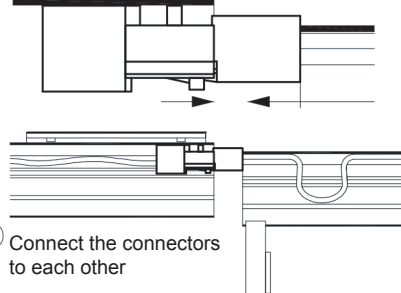


⑤ Fix the connecting plate to side A, then to side B

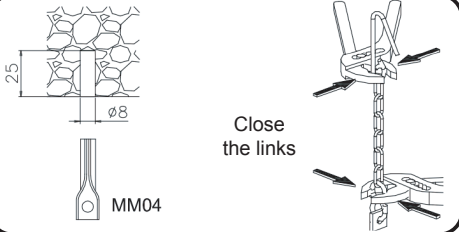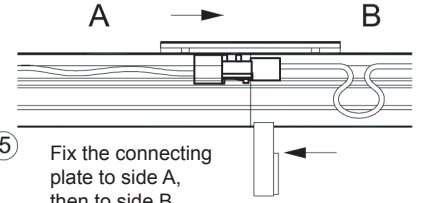


Connecting plate

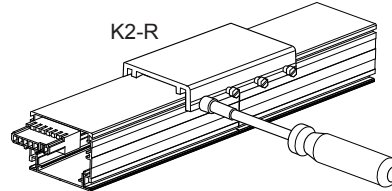

Mounting plate

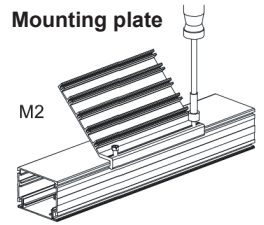

Suspension brackets

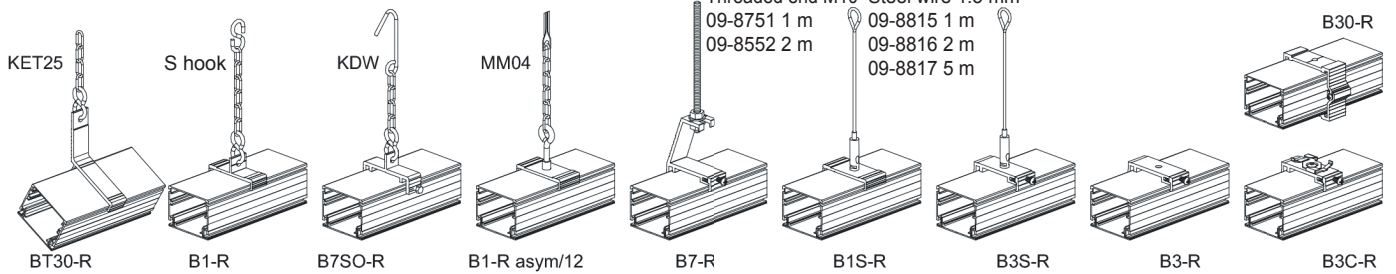

If you have any questions about the installation
e-mail montage@veko.com or call +31 224 273 235.



For more information on Veko Lightsystems,
product information and downloads, go to www.veko.com